

Entryphone® 500 Digital Entrance Panel Coded Access Feature

The Entryphone® 500 Series Digital dial panel has a coded access feature where a resident can enter a four (or five) digit PIN using the unit's keypad. If the correct PIN is entered the door release will activate and the door will unlock to allow the resident access to the building

For adding or deleting PINs or other administration features please refer to the main instruction booklet that was supplied with the panel.

User Instructions



To use the coded access feature, press the "CODE" button. The LCD display will show the message "ENTER CODE".

Now enter the four (or five) digit code. If the unit recognises the number as a valid one the display will show "DOOR OPEN" and the electric lock will activate for a few seconds and you may enter the building.

If the wrong code is entered the display will show "INVALID CODE" and the door will remain locked.

The unit has an anti-tamper feature that prevents too many codes being tried. After five failed attempts the unit will not allow any further key entries to be made for 30 seconds.

If you experience any issues with the coded access keypad, such as difficulty entering the access code or problems with the door lock, please report them to the system administrator or property manager.

Example with a valid PIN 8951

