

Q534 Telephone

Use Instructions


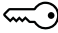 


Description

The Q534 is a four button wall-mounted audio door telephone compatible with Entryphone's Q series 2-wire systems.

The Q534 buttons are arranged vertically:

1. Top button: **Door Release 1** (for the main door).
2. Second button down: **Ring Mute** (to silence incoming calls).
3. Third button down: **Door Release 2** (for a secondary entry, like a vehicle gate).
4. Bottom button: **Power On** - for turning on speech when not called. A privacy feature ensures it cannot interrupt an active call.

How to Use the Q534:


- **Receiving a Call:**
When a call is received from the door, the device will ring, and the power button  will flash.
- **Answering the Call:**
When called pick up the handset to start speaking with your visitor.
- **Admitting a Visitor:**
If you're satisfied with the visitor's identity, press the top button (Door Release 1 ) to unlock the main door.
- **Second Entry Point (if applicable):**
For systems with a secondary access point (such as a vehicle gate), press the third button, (Door Release 2 ) , to grant access.
Note: The door release buttons are only functional during an active call with a visitor.
- **Muting the Ring:**
To silence incoming calls, press the second button down (Ring Mute ). A red light will turn on to indicate the ringer is muted.
To restore the ringer, press the Ring Mute button again.

Settings:

Accessing the Settings Mode:


Press and hold the second button down (Ring Mute **X**) for three seconds. You'll hear two beeps, and the red light will indicate you are in settings mode.

Changing the Ring Tone:

Once in settings mode, press the third button (Door Release 2 ) to cycle through the available 12 ring tones. When you've chosen a tone, press and hold the second button down (Ring Mute **X**) for three seconds to confirm. You'll hear two beeps, and the light will turn off, confirming the new tone is set.

If other options enabled

Door-bell ring tone adjust with fourth button 

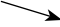 
Intercom ring tone adjust with top button 

Adjusting the Ring Volume:

Ring Volume: On the top left of the telephone there is a ring volume adjustment that can be turned using a small screwdriver. Turn anti-clock-wise to increase the volume.

Adjusting the Call Volume:

During a call, pressing the second button down (Ring Mute **X**) will cycle the call volume - 4 levels.

Ring volume adjustment 



Door release 1
Ring mute
Door release 2
Manual On/Off