

QT1 Handsfree Telephone

Use Instructions

The Entryphone Co. Ltd

23 Granville Road London SW18 5SD
020 8870 8635 entryphone.co.uk


entryphone[®] 

Description


The QT1 is a compact wall-mounted hands-free audio door telephone designed for seamless integration with Entryphone's Q series 2-wire system.

Operation:


• Receiving a Call:

When a call is received from the door, the unit will ring, and the power button  will flash.

• Answering the Call:


To answer, press the power button  once. This will open the speech line, allowing you to have a conversation with your visitor.

• Admitting a Visitor:


If you are satisfied with the visitor's identity, press the Door Release 1  button to unlock the door.

(Note: The door release buttons will only function when the unit is active (i.e., during a call).

• Second Entry Point:


For systems with a second entry point, such as an automatic vehicle gate, use the 2nd Door Release  button to grant access.

• Call Mute:

To avoid being disturbed, press the "Ring Mute"  button. The indicator will light up red, silencing all incoming calls. To deactivate the mute feature and restore the ringer, press the button again.

Settings:



• Access settings mode:

Press and hold the settings button  for three seconds. You will hear two beeps, and the icon will illuminate, indicating that you are now in settings mode..



Settings cont...

• Change the ring tone

The unit comes with a default warble ring tone, but you can choose from an additional twelve ring tones.

To change the ring tone, first enter settings mode. Then, press the ring mute button  to cycle through the available ring tones. Once you've selected your preferred tone, press and hold the settings button  for three seconds to confirm your choice. The unit will beep twice, and the illumination will turn off, indicating that the new ring tone is set.

• Change the ring tone volume

To adjust the ring tone volume, enter the settings mode and press the lock 2 button  to cycle through the four available volume levels. Once you've selected your preferred volume, press and hold the settings button  for three seconds to confirm your choice. The unit will beep twice, and the illumination will turn off, indicating that the new volume level is set.

