



**Connection Functions**

At	Terminal	Function
D/U	D	Speech from door
D/U	E	Speech to door
PSU	12	12v AC for ringing & lock
PSU	0	12v AC for ringing & lock
PSU	+	12v DC for speech & lamps
PSU	-	12v DC for speech & lamps
TEL	A2	Ringer Warble
TEL	A1	Ringer buzzer (if fitted)
TEL	L	Speech from door
TEL	P	Speech to door
TEL	1	Lock button
TEL	B	Common for ringers
TEL	F	Common for speech
TEL	G	Common for buttons

Plan 1 Provides Ringing, Communication and Door Release functions.

Notes Insert LINKS everywhere shown ●—●. Ringer Warble volume, all phones have a spindle at the top left corner. Speech volume is adjustable on the back of the entrance panel. Speaker and Microphone have separate controls.

Title : WDA\_1\_3\_201

Date : August 2017 Drawn by : TH