


DK-5902 DESK CONVERSION KIT - FITTING INSTRUCTIONS

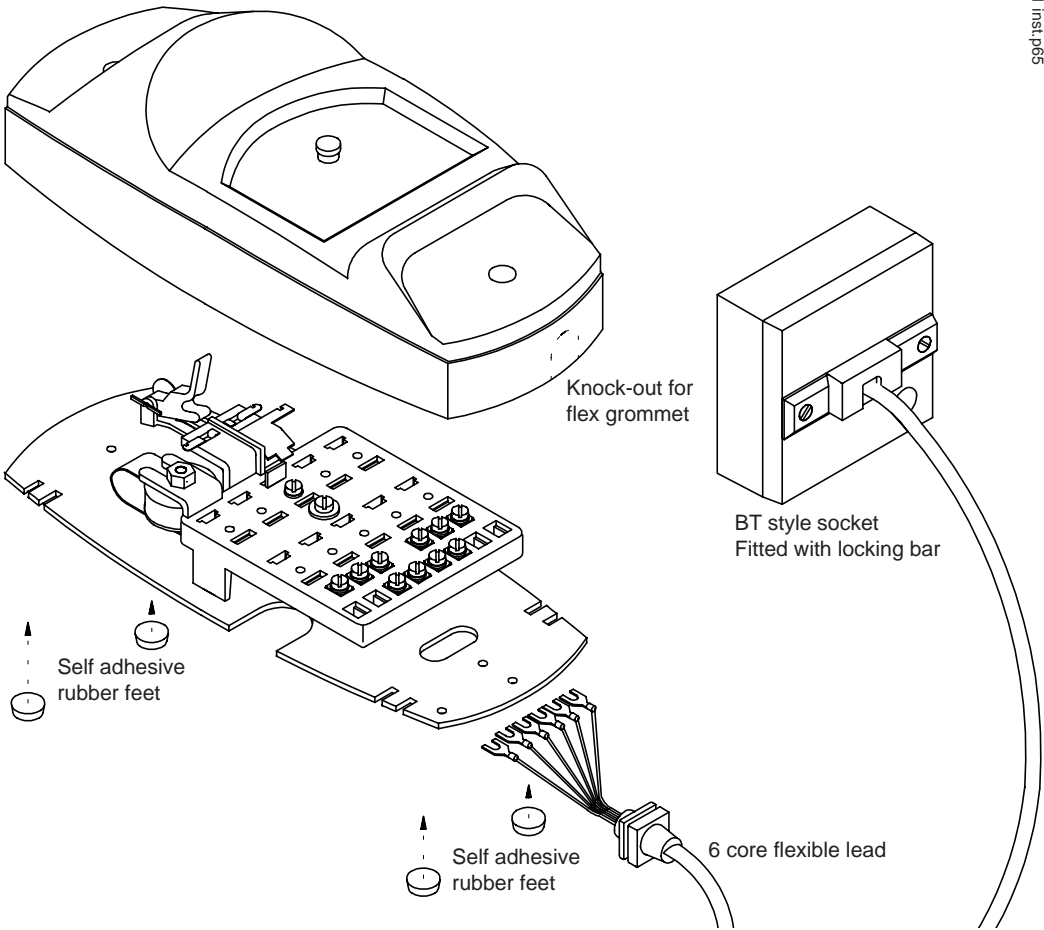

The DK-5902 is a kit of parts to allow the 5901 or 5902 to be converted as a desk instrument.

1. Remove the cover from the 5901/2 telephone.
2. Remove large knockout at the bottom of the telephone cover.
3. Connect wires to terminals. Noting which colour to which terminal.
4. Re-fit telephone cover ensuring the cable grommet is in place in the cover. Check the cover is properly seated and no cables have been pinched.
5. Affix 4 rubber feet to base.
6. Fit BT style socket box to wall and connect wires in accordance with appropriate wiring diagram. Note the numbers in the socket correspond with the following colours and we suggest the following connections in the phone.
7. Secure the socket to its box with the plug inserted and the locking bar in place

1	ORANGE	A
2	RED	B
3	BLUE	P
4	GREEN	F&G
5	WHITE	L
6	BLACK	3

NB. Links indicated on the wiring diagrams must be made in the telephone.