


DK-8802 DESK CONVERSION KIT - FITTING INSTRUCTIONS

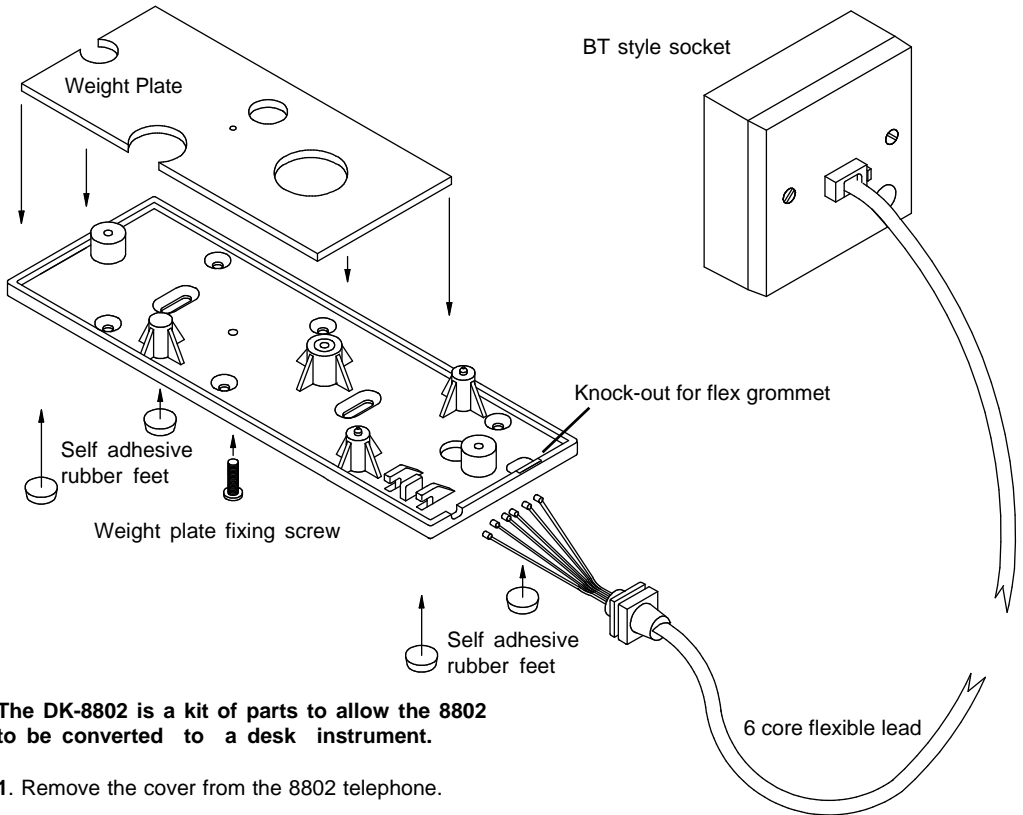

The DK-8802 is a kit of parts to allow the 8802 to be converted to a desk instrument.

1. Remove the cover from the 8802 telephone.
2. Loosen the centre screw on the PCB and move PCB to one side without disconnecting the handset cord.
3. Place weight plate on base and secure with fixing screw through centre hole.
4. Re-fit PCB to base.
5. Remove large knockout at the bottom end of the base and cover of telephone.
6. Connect wires to PCB terminals. Noting which colour to which terminal.
7. Re-fit telephone cover ensuring the cable grommet is in place. Ensure the cover is properly seated and no cables have been pinched.
8. Test that the gravity switch operates by listening for a double click when pressed.

9. Affix 4 rubber feet to base.
10. Fit BT style socket box to wall and connect wires in accordance with appropriate wiring diagram. Note the numbers in the socket correspond with the following colours and we suggest the following connections in the phone

1	ORANGE	A
2	RED	B
3	BLUE	P
4	GREEN	F&G
5	WHITE	L
6	BLACK	3

NB. Links indicated on the wiring diagrams must be made in the telephone.

11. Insert the plug into the socket.