


Plan 3

(Door and Intercom)

Entryphone® 200 Series Audio Wiring Diagrams with single button door unit

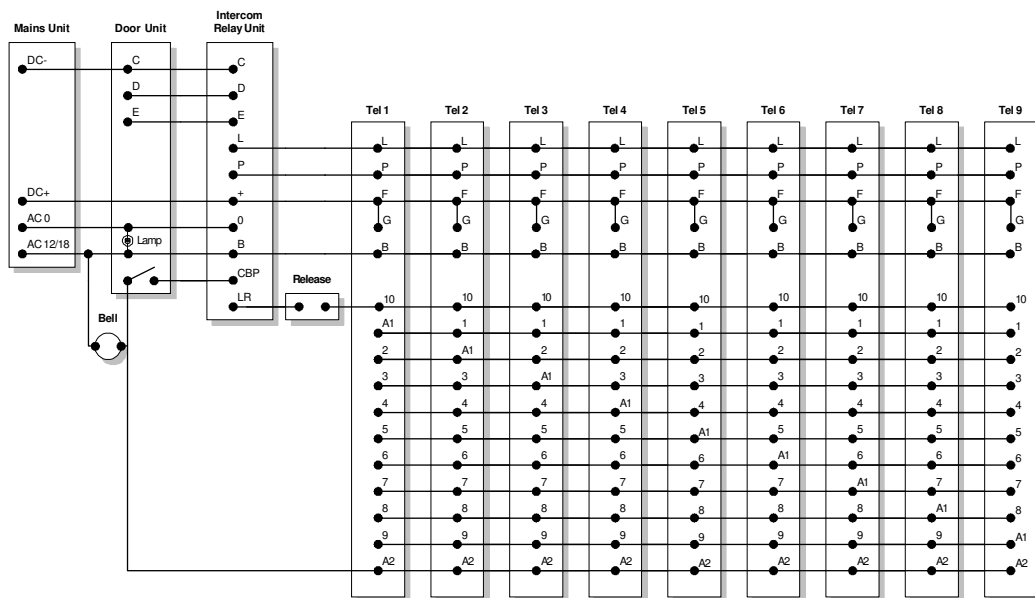

Operation

Plan 3 provides communication between an entrance as well as intercom between up to ten telephones plus remote releasing of the door.

The list below indicates the function of each terminal, this provides useful reference particularly for tracing faults or for a fuller understanding of how the system works.

Notes

1. The 210 series telephones are fitted with an electronic ringer (connection A2) and a buzzer (connection A1). The diagram above shows the entrance panel operating the electronic ringers and the buzzers being used for intercom calling. The bell is shown in case a separate door bell is preferred.
2. Adjustment of overall speech volume is achieved by varying the DC speech voltage.
3. Ensure all links are inserted where shown.

At	Terminal	Description
D/U	C	DC COMMON FOR SPEECH AT DU
D/U	D	SPEECH TO PHONE
D/U	E	SPEECH FROM PHONE
D/U	Lamp 24V	LAMP FOR BACK LIGHTING
M/U	0	AC OUTPUT
M/U	+/0	DC & AC COMMON OUTPUT
M/U	-	DC OUTPUT
M/U	12/18	AC OUTPUT
R/U	CBP	COMMON BELL PUSH
R/U	LR	LOCK RETURN
TEL	1	TOP BUTTON
TEL	10	BOTTOM BUTTON
TEL	A1	CALL LINE (BUZZER)
TEL	A2	CALL LINE (ELECTRONIC RINGER)
TEL	B	BUZZER COMMON
TEL	F	COMMON FOR SPEECH
TEL	G	COMMON FOR BUTTONS
TEL	L	SPEECH FROM DOOR
TEL	P	SPEECH TO DOOR

PROBLEM?

PLEASE DO NOT HESITATE TO CONTACT OUR
TECHNICAL DEPARTMENT
WE ARE HERE TO HELP!

The Entryphone Co.Ltd.

23 Granville Road London SW18 5SD Tel: 0181 870 8635 Fax: 0181 874 0066

® Entryphone is a trade mark registered in Great Britain No. B1037141

